
























Robotic pool cleaner operation manual	2
Mode d'emploi du nettoyeur automatique pour piscines	11
Manual de funcionamiento del limpiador automático	20
Manuale operativo per pulitori automatici da piscina	29
Manual de Operação do Limpador Automatizado para Piscinas	38
Robot zwembadreiniger bedieningshandleiding	47
Automatischer poolreiniger bedienungsanleitung	56
Caddy assembly/Montage du chariot/Unidad del carrito/Assemblaggio del carrello caddy/ Montagem do Carrinho/Montage van het wagentje/Zusammenbau des Wagens	65

IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL INSTRUCTIONS

-  **DANGER:** Risk of electrical shock or electrocution – The electrical supply to this product must be installed in accordance with the National Electrical Code and all applicable local codes and ordinances. Improper installation will create an electrical hazard which could result in death or serious injury to pool users or others due to electrical shock, and may also cause damage to property.
-  **WARNING:** DO NOT USE EXTENSION CORDS - DEATH OR INJURY CAN RESULT.
-  **WARNING:** To reduce the risk of injury, do not permit children to use this product unless they are closely supervised at all times
-  **WARNING:** If ambient air temperature exceeds 46° C, protect the power supply from direct sunlight. Do not cover the power supply
-  **WARNING:** The sole purpose of this product is for use as a robotic pool cleaner as described in this manual; any modification or other use will void the warranty.
-  **WARNING:** Do not allow children to use, touch, or play near or around the unit's power supply.
-  **WARNING:** A Ground Fault Current Interrupter (GFCI-USA) and Earth Leak Interrupter (ELI-EU) must be installed to protect your electrical outlet and to prevent any possible electric shock. Failure to do so could create an electrical hazard which could result in death or serious injury to pool users or others due to electrical shock and may also cause damage to property.
-  **WARNING:** Do not connect unit to AC power until installation has been completed.
-  **WARNING:** Do not use if unit is damaged in any way.
-  **WARNING:** Make sure the robotic pool cleaner is unplugged from its power supply before opening the unit or performing any other maintenance.
-  **WARNING:** To avoid damage to the power supply and cord, never carry the power supply by the cord or pull on the cord to disconnect from an outlet. Instead, disconnect by pulling the plug, itself, from the outlet. Do not pull cord around sharp corners or edges.
-  **WARNING:** Do not play with the cleaner or cable or apply to body. It can trap or tear hair or body parts. The cable can trip or entangle swimmers which could result in drowning.
-  **WARNING:** Do not operate with a damaged cord or power supply.
-  **WARNING:** Before installing the cleaner, understand the cleaner's coverage. The cleaner was not designed to automatically clean steps or to work under solar covers. It was also not designed to do initial clean up for a new pool installation.
-  **WARNING:** Your cleaner should not be used while people are swimming in the pool.
-  **WARNING:** The power supply must be at least 4 meters from the pool's edge at all times!
-  **WARNING:** It is recommended that you clean your filter bag and check the impeller to make sure it is free and clear of debris after every use.
-  **CAUTION:** DO NOT place the cleaner in the pool prior to securing all connections to the swivel/cable
-  **CAUTION:** Disconnect the power supply from the outlet when not in use.
-  **CAUTION:** DO NOT switch the pool cleaner to "ON" if it is not immersed in the water. Operation the cleaner out of the water may cause severe damage and will result in loss of warranty. Always remember to turn the power supply "OFF" and unplug it from the power outlet before removing the cleaner from the pool.
-  **CAUTION:** If your robotic pool cleaner is not working as it should or has been dropped or damaged in any way, contact SmartPool Customer Service before using at info@smartpooleurope.com or visit our website at www.smartpooleurope.com

SAVE THESE INSTRUCTIONS

FLOATING SWIVEL SETUP

Congratulations on your purchase of the most technologically advanced automatic pool vacuum available today. Your SmartPool cleaner is easy to use and will make maintaining your pool affordable and effortless. Following these simple directions will insure that the cleaner will quickly and efficiently clean your pool today and for many years to come.

IMPORTANT: All connections must be made prior to using this cleaner. Do not place any portion of the cleaner into the pool prior to reading the instructions below.

How it Works

The Floating Swivel is designed to prevent cable twisting and tangling by providing a free spinning conduit that rotates 360° in both directions, while maintaining electrical continuity. The Floating Swivel will glide on the surface of the water as the cleaner moves around the pool. As tension builds in the cable, the outer, cylindrical portions of the swivel will keep the float stable allowing the front portion of the swivel to rotate, releasing the tension that has been generated by the cleaner's movement (See Figure S1).

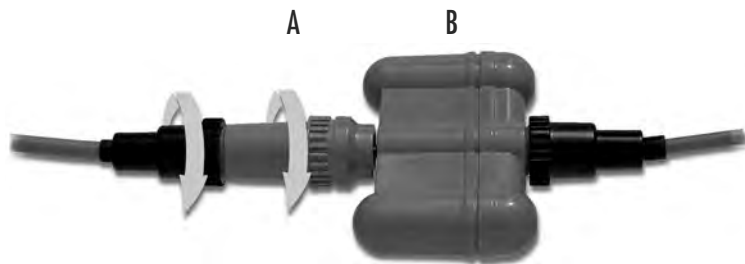


FIGURE S1

NOTE: The swivel performs most efficiently when floating on the surface of the water. If the depth of the pool exceeds the length of the provided cable (from cleaner to swivel, 8') an extension can be installed to lengthen this portion of the cable to optimize the cleaner's performance. Please contact SmartPool at 732-730-9880, M-F, 9am – 5pm, EST for assistance. The cleaner will still operate in pools that have depths greater than 8' without the extension cord but it will perform at a higher efficiency with the extension cord in these situations.

How to Connect the Swivel

OVERVIEW

As you will notice, the swivel is not connected to the cable inside the carton. This is done to prevent any unnecessary stress from being applied to the swivel and the connections during the shipping process. Below are instructions on how to connect the swivel.

The short cord (from cleaner to swivel, 8') will need to be connected to the small end of the swivel (A). The long cable (from the swivel to the power supply, 40' or 50') will need to be connected to the large end of the swivel (B) as seen in Figure S1.

NOTE: The connections are designed to be distinctly different to prevent the wrong end of the cord from being plugged into the wrong end of the swivel (See Figures S2 and S3).

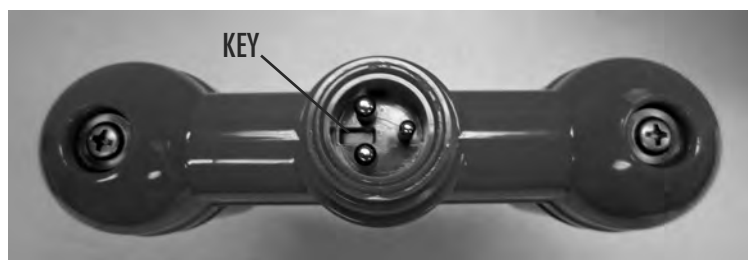


FIGURE S2

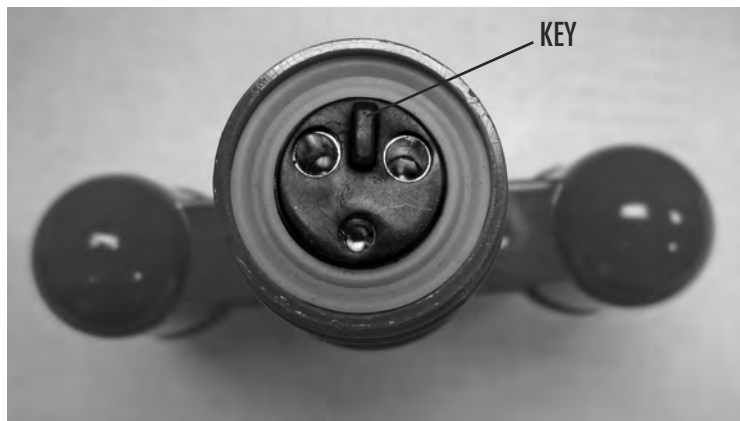


FIGURE S3

INSTRUCTIONS

IMPORTANT: DO NOT use any tools for the following steps. All connections should be hand tightened.

- 1) Ensure the gasket is secured inside the black plug of the long cable (40' or 50') as shown in Figure S4.



FIGURE S4

- 2) Insert the black plug on the end of the long cable (40' or 50') into the large end of the swivel (B), as shown in Figure S5, ensuring the pins are aligned properly. Press firmly to ensure a solid connection is made.
- 3) Grasp the swivel and hand tighten the black collar from the cable (until it is snug) to secure the connection (Figure S6A).
- 4) Insert the blue plug from the short cable (from cleaner to swivel, 8') into the small end of the swivel (A) as shown in Figure S5, ensuring the gasket is in the swivel connection and the pins are aligned. Press firmly to ensure a solid connection is made.
- 5) Grasp the swivel and hand tighten the black collar from the cable (until it is snug) to secure the connection (Figure S6B).



FIGURE S5

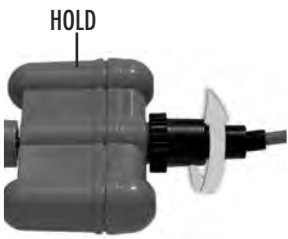


FIGURE S6A

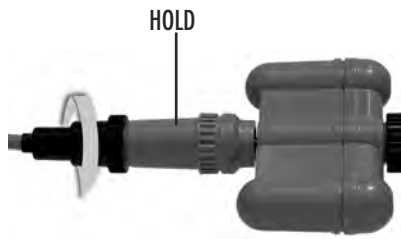


FIGURE S6B

- 6) Confirm that all connections to the swivel are tightened properly prior to placing the cleaner into the pool.

Installing an Extension Cord

NOTE: This section is only necessary for pools with depths greater than 8'.

IMPORTANT: DO NOT use any tools for the following steps. All connections should be hand tightened.

- 1) Remove the entire cleaner from the pool.
- 2) Dry all connections and the Floating Swivel.
- 3) Disconnect the short cable from the swivel by loosening the black collar and gently pulling on the plug (Figure E1).

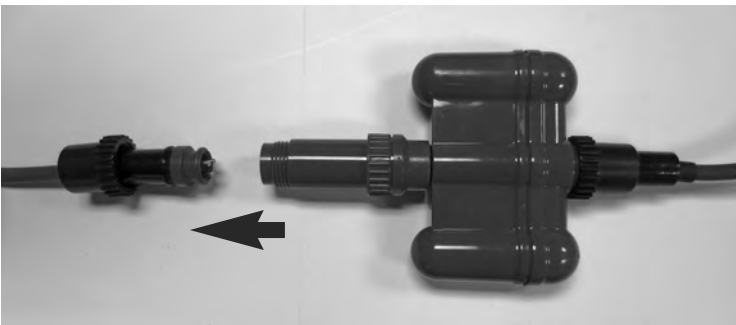


FIGURE E1

NOTE: Ensure the gasket inside the swivel is still secured in place after the plug is removed from the swivel.

- 4) Insert the blue plug of the Extension Cord into the open end of the swivel ensuring that the gasket is firmly in place prior to making the connection (Figure E2).



FIGURE E2

- 5) Secure the connection by rotating the black collar in a clockwise direction until it is hand tight.
- 6) Insert the Extension Cord Union on the end of the Extension Cord and secure it by hand tightening the black collar on the end of the cable (Figure E3).

NOTE: The Extension Cord Union has two distinctly different sockets to prevent an incorrect connection.

- 7) Insert the blue plug on the 8' cable into the other end of the union and hand tighten the black collar, ensuring the gasket is in place prior to making the connection (Figure E3).

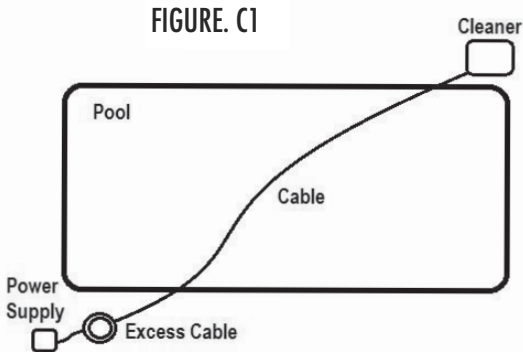


FIGURE E3

IMPORTANT: Check all connections are firmly in place prior to using the cleaner. The cleaner is now ready to use as per the normal operation instructions.

INSTALLATION

- Walk the cleaner to the furthest point of the pool (as in Figure C1).
- Add 6' / 2m of cord to the pool for additional coverage.
- Coil up the remaining cable and secure it so that excess cable will not be pulled into the pool (the Velcro strap originally attached to the cable can be used).
- Attach the antenna to the power supply by aligning the base of the antenna with the gold connector on the power supply. Twist the antenna onto the connector in a clockwise direction until snug. **DO NOT OVERTIGHTEN.**
- Be sure to only plug the power supply into a GFCI (ground fault current interrupter) or ELI (earth leak interrupter) protected electrical outlet.
- Look at the power supply and check that the power supply switch is in the off position.
- Plug the power supply into the GFCI or ELI protected outlet.
- Plug in the connector from the cleaner into the socket. The connector is keyed so that it will only plug into the socket one way. Make sure that the plug is pushed all the way onto the socket. Slide the connector lock (strain relief) onto the connector and turn the connector lock clockwise until it is snug.



**DO NOT RUN THE CLEANER OUT OF THE WATER.
OPERATING THE CLEANER OUT OF THE WATER WILL DAMAGE THE MOTORS AND VOID THE WARRANTY**

- Place the cleaner into the pool and if needed rock the cleaner side to side to release any trapped air. The cleaner will sink to the bottom of the pool.
- Turn the power supply to the ON position.
- The cleaner will begin its cleaning program.
- The cleaner will automatically shut itself down after three hours.
- If a second cleaning is required or the unit is accidentally shut off, you should wait one minute before switching the unit on again.



IMPORTANT NOTE: During normal operation, the cleaner will appear to shut off for a few seconds. This is normal and part of the pool cleaning program. The unit has multiple ways of cleaning the walls. It may climb to the top, scrub, then make a turn and drive back down the wall to the bottom of the pool. It may also climb to the top, shut down for a few seconds, remove itself from the wall, turn its pump motor on again, pushing itself down to the bottom of the pool away from the wall. It could also climb the wall, scrub the waterline, turn its pump motor off, and float away from the wall down to the bottom. All of these variations have been programmed into the cleaner and are designed to most quickly and efficiently clean your entire pool. This unit has been designed to clean all areas of your pool. It will climb the walls, and occasionally break the surface. In the process of climbing the wall it may stay on the surface and continue to operate from several seconds to a few minutes. This is normal operation procedure and the cleaner will eventually make its way to the bottom to continue its cleaning. Since most of the dirt is concentrated on the floor of the pool, the cleaner will spend the majority of its time on the floor.

GENERAL MAINTENANCE

Please follow the below procedures to ensure maximum cleaner performance and overall component condition.

Water Chemistry

The following ranges are the recommended water levels to maintain a properly balanced pool.

PH Level: 7.2 – 7.8

Total Alkalinity: 80 – 150ppm

Calcium Hardness: 150 – 300ppm

NOTE: Properly balanced water is a guideline for preserving warranty coverage.

REMOVING THE CLEANER FROM THE POOL

- Slowly pull the floating cord to get the cleaner to the pool surface and near the edge of the pool. **DO NOT PULL THE CLEANER OUT OF THE POOL BY THE CORD OR THE SWIVEL.**
- Reach down and grasp the handle of the cleaner and remove it from the pool as shown in Figures 1 and 2.



FIGURE 1: Grasping Handle



FIGURE 2: Lift from Pool by Handle

CLEANING THE FILTER BASKETS

- Place the cleaner on a flat surface in the upright position
- Press the front, red latches/buttons IN at the same time, the top shell will pop open (Figure 3).
- Lift the top shell until an audible click is heard, this keeps the top shell locked in the UP position (Figure 4).
- Remove the baskets from the inside of the cleaner (Figure 5).
- Apply slight pressure to the top locking clip of the filter basket and remove the basket lid (Figures 6 and 7).
- Empty the debris from the basket into a waste bin and rinse the basket with a hose.
- Reinstall the basket lid and seat the baskets back into the inside of the cleaner, the baskets are interchangeable (Figure 8).
- Close the top shell of the cleaner (an audible click will be heard when closing) and ensure the front, red latches/buttons lock securely (Figure 9) shown below.

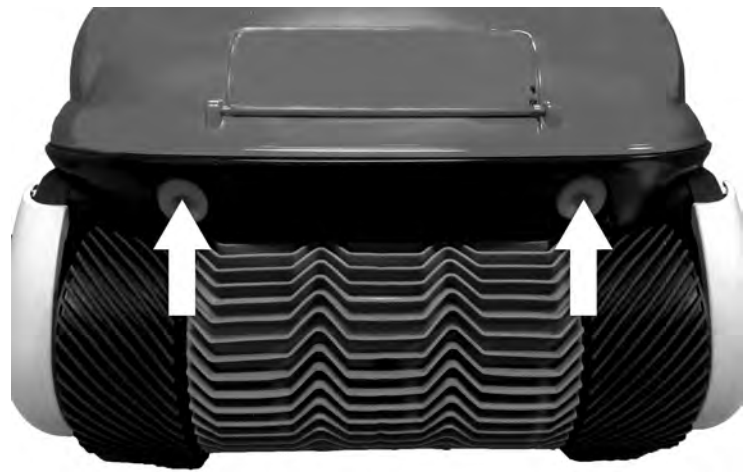


FIGURE 3



FIGURE 4



FIGURE 5



FIGURE 6



FIGURE 8



FIGURE 7



FIGURE 9

CABLE MAINTENANCE

UNCOILING THE CABLE

In the event that the cable does coil on itself, it can easily be straightened by following the below instructions.

- Turn the power supply to the off position
- Remove the cleaner from the pool and place it on the far end of the pool deck/yard (away from the power supply)
- Unscrew the blue cable from the power supply
- Hold the black collar at the plug end and gently lift the cable off the ground (FIGURE 9)
- Gently pull on the cable to straighten
- The swivel will rotate as tension is applied, eliminating the coils in the cable
- Return to normal cleaner use

- Unplug the cable from the power supply.
- Hold the cord close to the cleaner.
- Make a roughly two foot loop with the cord as shown.
- When making loop, roll the cable slightly in a counter clockwise manner to maintain form.

DO NOT WRAP THE CORD TIGHTLY AROUND OBJECTS.

STORAGE


WINTER

If temperatures will regularly be below 45 degrees Fahrenheit or 5 degrees Celsius, the cleaner and power supply should be stored indoors.

SUMMER

The unit should be stored in an area that will afford some protection from the elements to insure that it retains its finish. **DO NOT STORE NEAR OPEN CHEMICALS**

ATV PARTS LIST

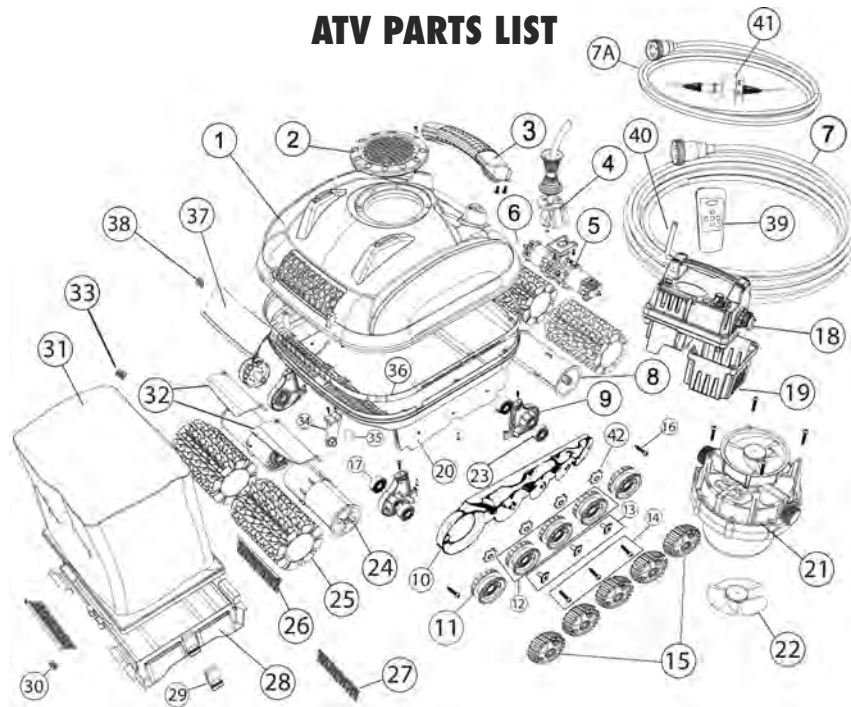

LOCATION	ITEM NUMBER	DESCRIPTION
1	NC7115RD	Top Shell - Red
2	NC7110B:02	Impeller Cover - Black
3	NC7109	Handle - Black
4	NC7105	Cable Strain Relief
5	NC7107	Drive Motor
6	NC7139	Drive Motor Washers (set of 4)
7	NC3414	50' Cable - 3 Wire - Swivel to Power Supply
7A	NC3411	8' Cable - 3 Wire - Swivel to Cleaner
8	NC7108	Drive Wheel Tube
9	NC7137:02	Brush Mount
10	NCTR1018RD	Side Plate/Fender - Red
11	NCTR1034	Drive Wheel
12	NCTR1017	Track Wheels
13	NCTR1017:RTN	Track Wheel Retaining Washer
14	NCTR1017:SCRW	Track Wheel Screw
15	NCTR1002	Tires
16	NCTR1018:SCRW	Side Plate Screws
17	NC7136	Bushing
18	NC7122RCEU	Power Supply - 3 Hr
19	NC7138	Power Supply Casing - Bottom Only
20	NC7106B:02	Lower Chassis - Black
21	NC7113	Pump Motor
22	NC7132	Impeller
23	NC7135	Brush Mount Bearing
24	NC7112	Non Drive Wheel Tube
25	NC1004	Drive Brush (Set of 2)
26	NC7101:02	Bottom Lid Door with Debris Filter
27	NC7130	Intake Filters (Set of 2)
28	NC7102B:03	Bottom Lid - Black
29	NC1035	Bottom Lid Locking Tab (Set of 2)
30	NC7127	Spring for Bottom Lid Door (Set of 2)
31	NC7120	Filter Bag
32	NC7111	Inner Quick Drain Flaps
33	NC7128	Spring for Inner Quick Drain Doors (Set of 2)
34	NC7103	Brush Center Bracket
35	NC7140	Twist lock for NC7106B:02 Chassis
36	NC7119	Upper and Lower Gasket Seal
37	NC7114RD	Quick Drain Door
38	NC7131	Spring for Quick Drain Door
39	NCRC	Remote Control
40	NC7129	Antenna for NC7122RCEU
41	NC3510	Floating Swivel
42	NCTR1042	Gear for Drive System

SmartPool reserves the right to revise without notice. SmartPool is not responsible for typographical errors.

TROUBLESHOOTING GUIDE

ERROR	REASON(S)	SUGGESTION(S)
PUMP AND DRIVE MOTORS NOT OPERATING	<i>AC OUTLET/GFI</i>	<i>CHECK AC OUTLET/RESET THE GFI OR TRY ANOTHER OUTLET</i>
	<i>POWER SUPPLY RESET</i>	<i>TURN THE POWER SUPPLY OFF AND UNPLUG THE POWER SUPPLY FROM THE AC OUTLET. WAIT 30 SECONDS AND TURN POWER SUPPLY ON.</i>
	<i>EXTENSION CORD</i>	<i>TRY PLUGGING THE POWER SUPPLY DIRECTLY INTO AN OUTLET</i>
	<i>LOOSE SWIVEL CONNECTION</i>	<i>ENSURE ALL CONNECTIONS TO/FROM THE SWIVEL ARE SECURE.</i>
NOT MOVING	<i>BRUSHES WORN</i>	<i>CHECK BRUSHES AND REPLACE IF NECESSARY</i>
	<i>DEBRIS CAUGHT IN WHEELS/BRUSHES/IMPELLER</i>	<i>CHECK FOR DEBRIS AND CLEAN WITH A GARDEN HOSE/MAY HAVE TO REMOVE IMPELLER CAP (1 SCREW)</i>
	<i>CLEANER CAUGHT ON OBSTRUCTION IN POOL</i>	<i>TURN THE CLEANER OFF AND GENTLY PULL ON THE CORD TO REMOVE IT FROM OBSTRUCTION</i>
NO SUCTION	<i>FILTER FULL</i>	<i>CLEAN THE FILTER BAG THOROUGHLY WITH A GARDEN HOSE</i>
	<i>DEBRIS IN FAN/IMPELLER</i>	<i>CHECK FOR DEBRIS AND CLEAN WITH A GARDEN HOSE/MAY HAVE TO REMOVE IMPELLER CAP (1 SCREW)</i>
STARTS AND STOPS	<i>FILTER FULL</i>	<i>CLEAN THE FILTER BAG THOROUGHLY WITH A GARDEN HOSE</i>
	<i>DEBRIS CAUGHT IN WHEELS/BRUSHES/IMPELLER</i>	<i>CHECK FOR DEBRIS AND CLEAN WITH A GARDEN HOSE/MAY HAVE TO REMOVE IMPELLER CAP (1 SCREW)</i>
	<i>BRUSHES WORN</i>	<i>CHECK THE BRUSHES AND RING (IF APPLICABLE) FOR WEAR/HOLES WHICH WILL INHIBIT THE CLEANER'S PERFORMANCE</i>
	<i>CAUGHT ON SOMETHING IN POOL</i>	<i>TURN THE CLEANER OFF AND GENTLY PULL ON THE CORD TO REMOVE IT FROM OBSTRUCTION</i>
	<i>LOOSE SWIVEL CONNECTION</i>	<i>ENSURE ALL CONNECTIONS TO/FROM THE SWIVEL ARE SECURE.</i>
BACK & FORTH/DOING WHEELIES OR SPINNING IN CIRCLES	<i>DEBRIS CAUGHT IN WHEELS/BRUSHES/IMPELLER</i>	<i>CHECK FOR DEBRIS AND CLEAN WITH A GARDEN HOSE/MAY HAVE TO REMOVE IMPELLER CAP (1 SCREW)</i>
	<i>CLEANER CAUGHT ON OBSTRUCTION IN POOL</i>	<i>TURN THE CLEANER OFF AND GENTLY PULL ON THE CORD TO REMOVE IT FROM OBSTRUCTION</i>
NOT CLIMBING	<i>DEBRIS CAUGHT IN WHEELS/BRUSHES/IMPELLER</i>	<i>CHECK FOR DEBRIS AND CLEAN WITH A GARDEN HOSE/MAY HAVE TO REMOVE IMPELLER CAP (1 SCREW)</i>
	<i>FILTER FULL</i>	<i>CLEAN THE FILTER BAG THOROUGHLY WITH A GARDEN HOSE</i>
	<i>BRUSHES WORN</i>	<i>CHECK THE BRUSHES AND RING (IF APPLICABLE) FOR WEAR. REPLACE IF NECESSARY</i>
	<i>POOL CHEMISTRY (ALGAE GROWTH)</i>	<i>HAVE THE WATER CHEMISTRY CHECKED BY A POOL PROFESSIONAL AND/OR BRUSH THE POOL WALLS</i>
CORD TANGLING	<i>FLOATING CORD NOT BEING UNPLUGGED FROM POWER SUPPLY REGULARLY</i>	<i>MAKE SURE THE CABLE IS BEING UNPLUGGED FROM THE POWER SUPPLY AFTER EVERY 1-2 CYCLES TO RELEASE THE TENSION THAT BUILDS DURING A CYCLE</i>
	<i>EXCESS CORD IN POOL</i>	<i>ONLY USE THE NECESSARY AMOUNT OF CABLE TO COVER THE POOL EFFICIENTLY</i>
	<i>CORD NOT BEING UNWOUND BEFORE USE</i>	<i>MAKE SURE THE CABLE IS STRAIGHTENED OUT BEFORE THE CYCLE IS STARTED/WALK THE CLEANER THE LENGTH OF THE POOL TO STRAIGHTENED CORD</i>
	<i>CORD BEING WRAPPED/STORED INCORRECTLY</i>	<i>WHEN WRAPPING THE CABLE, MAKE LARGE LOOPS AND START AT THE CLEANER END SO THE FREE, PLUG END CAN UNWIND ANY RESIDUAL TENSION</i>
UNIT FLOATING	<i>AIR TRAPPED</i>	<i>ROCK THE CLEANER BACK AND FORTH UNDER WATER TO RELEASE ANY TRAPPED AIR</i>
	<i>CLEANER CLIMBING TOO HIGH REGULARLY</i>	<i>A WEIGHT CAN BE ADDED TO THE CLEANER TO PREVENT IT FROM CLIMBING TOO HIGH AND TO ASSIST IN THE DESCENT BACK TO THE FLOOR</i>
	<i>D.E. PRESENT IN FILTER</i>	<i>IF THERE IS D.E. IN THE POOL, IT COULD CLOG THE BAG. CLEAN THE BAG THOROUGHLY</i>

LIMITED WARRANTY

This product has been manufactured, tested and inspected in accordance with carefully specified engineering requirements. It is warranted to be free from defects in materials and workmanship under normal use and service, subject to qualifications, conditions and limitations as described below.

SmartPool 4 Year Limited Warranty:

1st Year: Full coverage on manufacturer defects.

2nd Year: Full coverage on manufacturer defects.

3rd Year: 50% coverage on pump and drive motors.

4th Year: 25% coverage on pump and drive motors.

Owners will be charged 50% of the current MSRP for motors found to be defective within the third year of ownership and 75% of the current MSRP for motors found to be defective in the 4th year. The purchaser is also responsible for labor charges associated with the repair of the product and applicable freight costs.

This warranty covers only normal and reasonable use. Damage, defects, malfunctions or other failures arising from its use without the original transformer or any use which does not comply with the instructions in the Operator's Manual, including the failure of the purchaser to provide reasonable and necessary maintenance, shall invalidate this warranty. Damage, defects, malfunctions or other failures caused by or related to repairs performed by any servicer other than an authorized service representative of SMARTPOOL shall not be covered. Use of this cleaner in a commercial setting will void the warranty.

The warranty obligations of SMARTPOOL shall be limited to repair or replacement of the product or of any defective component, at the option of SMARTPOOL. Such repair or replacement may include the use of refurbished components and/or units at the option of SMARTPOOL. SMARTPOOL shall not be liable or responsible under any circumstances or in any amount for any consequential or incidental damages, or for any injury or damages to persons or property using or used in connection with the product, or for loss of profits or other costs or expenses of any kind of character.

THERE ARE NO OTHER WARRANTIES OR REPRESENTATIONS, EITHER EXPRESS OR IMPLIED, WHETHER OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR OTHER, MADE BY SMARTPOOL OTHER THAN THOSE SPECIFICALLY SET FORTH IN THIS WARRANTY. NO PERSON, FIRM, OR CORPORATION IS AUTHORIZED TO MAKE ANY REPRESENTATIONS OR INCUR ANY OBLIGATIONS IN THE NAME OF OR ON BEHALF OF SMARTPOOL, EXCEPT AS STATED HEREIN. THE REMEDIES SET FORTH IN THIS WARRANTY ARE EXPRESSLY UNDERSTOOD TO BE THE EXCLUSIVE REMEDIES AVAILABLE TO THE PURCHASER, AND THIS WARRANTY CONTAINS THE FULL AND COMPLETE AGREEMENT BETWEEN SMARTPOOL AND THE PURCHASER. THIS WARRANTY SETS FORTH THE ONLY OBLIGATIONS OF SMARTPOOL WITH REGARDS TO THIS PRODUCT, AND THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.

To obtain warranty service, contact the shop where you purchased your cleaner. After receiving an approval from the shop, return the cleaner, adequately packed, to the location specified by the shop. Attach to the cleaner a copy of the invoice including date of purchase, serial number and description of the problem.

CAUTION:

Some vinyl liners are more susceptible to surface wear or pattern removal than others, caused by objects, such as brushes, floats, toys, chlorine dispensers, and automatic pool cleaners, coming into contact with the vinyl surface. Such patterns can be severely scratched or abraded merely by rubbing the surface with a brush. Pattern ink can also rub off when it comes into contact with objects in the pool. SmartPool is not responsible for, nor does this limited warranty cover, pattern removal, abrasion, markings on or damage of any kind to vinyl liners.